


# SOMFY INSTRUCTIONS

## TELIS RTS MODULIS

### REMOTE CONTROLS

Part #'s  
 1810663 Telis 5 Modulis RTS Silver  
 1810664 Telis 5 Modulis RTS Lounge

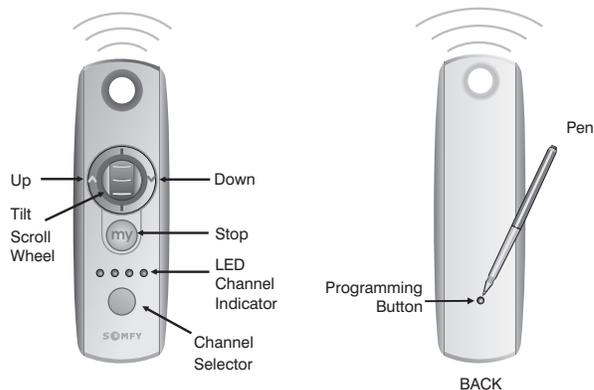

## PROGRAMMING – INITIAL INSTALLATION


**Note:** During initial programming it is recommended to provide power only to the motor or RTS receiver being programmed.

1. Set the RTS motor or receiver in Programming Mode. (Refer to the installation instruction of the relevant RTS motor or receiver for this procedure.)

2. Select a channel to be memorized by pressing the Channel Selector button. The LED lights will illuminate up each time the Channel Selector Button is pressed to show what channel is being operated.



3. Using a paper clip, pen or similar device, briefly press the Programming Button (for 1 second) located on the back of the remote. The RTS motor or receiver will confirm the addition of the remote in their respective manners.

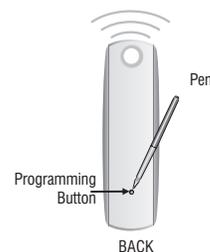


## PROGRAMMING – ADDING A NEW REMOTE

1. With your current remote, select the shade to operate by pressing the Channel Selector Button. The LED lights will illuminate each time the Channel Selector Button is pressed to show what channel is being operated.




2. Using a paper clip, pen or similar device, press and hold the Programming Button on the back of the remote until your window shade jogs up then down.

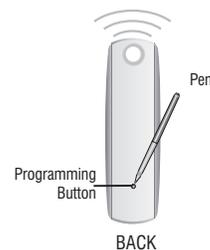

3. Get the new remote and select the new channel.



4. Using a paper clip, pen or similar device, press and hold the Programming Button on the back. The window shade will jog. This remote will now operate your shade or awning.

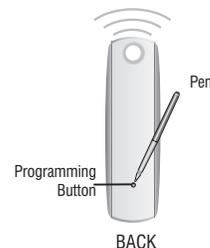


## PROGRAMMING – SETTING FAVORITE POSITION

1. Select the shade to operate by pressing the Channel Selector Button. The LED lights will illuminate each time the Channel Selector Button is pressed to show what channel is being operated.



2. Using the up (▲) or down (▼) buttons or the scroll wheel, bring the window to your favorite position, for example halfway down or slats open. Press the center (●) button to stop movement at the desired location.

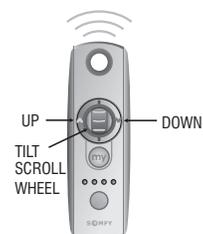

**somfy**

3. Press and hold the center (my) button until the window shade jogs. The new position is now recorded.



4. To reach your favorite position, press the center (my) button whenever the blind is already stopped. The window blind will automatically go to that position.



## OPERATING

1. Select the blind to operate by pressing the Channel Select Button. The LED lights will illuminate each time the Channel Select Button is pressed to show what channel is being operated.



2. To raise or tilt the slats upward on your horizontal blind, simply press the up (▲) button.



3. To lower or tilt the slats downward of your horizontal blind, simply press the down (▼) button.



4. If you want to stop your blind while it is moving, press the center (my) button.




5. To precisely adjust the slats of your horizontal blind, roll the scroll wheel up or down. Stop scrolling once the slats reach the desired angle.



## REPLACING THE BATTERY

1. Using a small screwdriver loosen the screws on the reverse side of the remote control and remove the back cover.
2. Replace the battery with one 2430 Lithium 3V battery.

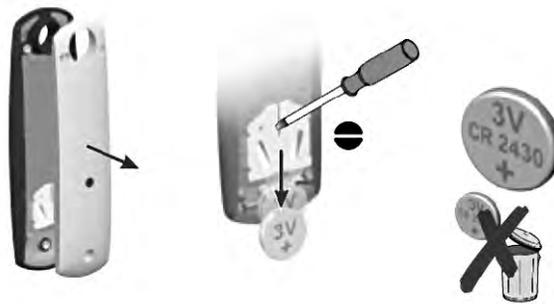

**NOTE: IN CASE OF A LOST TRANSMITTER, PROFESSIONAL PROGRAMMING ASSISTANCE IS REQUIRED. PLEASE CONTACT SOMFY AT [somfytech@somfy.com](mailto:somfytech@somfy.com) OR YOUR LOCAL DEALER AT [www.somfy.com/locatedealer](http://www.somfy.com/locatedealer).**